



Construction Guide

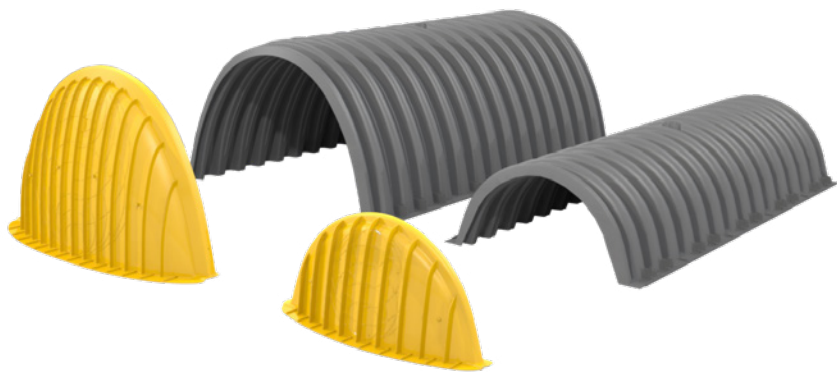


Table of Contents

<i>Introduction</i>	<i>1</i>
<i>Material & Equipment Checklist.....</i>	<i>2</i>
<i>Materials.....</i>	<i>2</i>
<i>Equipment.....</i>	<i>2</i>
<i>Handling</i>	<i>3</i>
<i>Receiving</i>	<i>3</i>
<i>Unloading.....</i>	<i>3</i>
<i>Moving</i>	<i>3</i>
<i>Subgrade and Foundation Preparation</i>	<i>4</i>
<i>Excavation.....</i>	<i>4</i>
<i>Placing Geotextile</i>	<i>4</i>
<i>Placing Foundation</i>	<i>5</i>
<i>Manifold Assembly</i>	<i>6</i>
<i>End Cap and Chamber Assembly</i>	<i>7</i>
<i>Connecting End Caps to Manifold.....</i>	<i>7</i>
<i>For prefabricated end cap/inlet:</i>	<i>7</i>
<i>For on-site end cap/inlet fabrication:</i>	<i>7</i>
<i>Adding Chambers.....</i>	<i>7</i>
<i>Pre-treatment/Sediment Row</i>	<i>9</i>
<i>Inspection Port Placement</i>	<i>9</i>
<i>Chamber Backfill Process</i>	<i>10</i>
<i>Embedment Stone.....</i>	<i>10</i>
<i>Initial Backfill</i>	<i>11</i>
<i>Final Backfill</i>	<i>12</i>
<i>Table 1 - Backfill Materials.....</i>	<i>12</i>
<i>Table 2 - Placement Methods.....</i>	<i>13</i>
<i>Table 3 - Construction Loading</i>	<i>14</i>
<i>Notes.....</i>	<i>15</i>

Introduction

To ensure a trouble-free installation, it is essential that the installer is familiar with the minimum requirements specified in this guide.

Adherence to this guide is necessary to maintain the structural integrity of the HydroStor Chamber system. In addition, the chamber supplier, chamber installer (site contractor) and the design engineer may meet for a pre-construction meeting to discuss any questions relating to the installation process, and the guidelines herein.

Material & Equipment Checklist

Materials

- ☐ HydroStor chambers and end caps
- ☐ Woven & non-woven geotextiles
- ☐ Manifold pipe, fittings & couplers
- ☐ Acceptable backfill material found in Table 2 on page 13
- ☐ Pre-treatment system
- ☐ Inlet diversion structure for sediment row (optional)
- ☐ PVC pipe & fittings for inspection port (optional)

Equipment

- ☐ Forklift equipment for pallet dimensions below:
***Note:** HS31 chamber pallets are 35" x 90" (89 cm x 229 cm), weighing approximately 1,630 lbs. (740 kg).*
HS75 chamber pallets are 52" x 88" (132 cm x 223.5 cm), weighing approximately 2,500 lbs. (1,134 kg).
- ☐ Reciprocating saw or hole saw for coring holes in end caps/chambers
- ☐ Approved compaction equipment
- ☐ Excavator to dig trench and place stone and soil backfill
- ☐ Stone conveyor/lightweight tracked dozer not exceeding 4.5 psi (31 kPa) to grade backfill
- ☐ Wire cutters
- ☐ Transit/laser level

Handling

Receiving

- Visually inspect chambers and end caps for damage.
- Ensure accurate quantities.




Unloading

- Unload chamber pallets using forklift.



Moving

- Use handles on each side of larger chambers when moving.

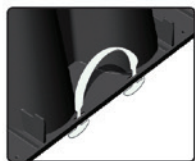


Subgrade and Foundation Preparation

Excavation

- Excavate area according to project plans.
- Maintain required clearance around chamber system (see illustration below for minimum clearance).




If subgrade is wet or unstable, take appropriate measures to correct. Consult design engineer if necessary.

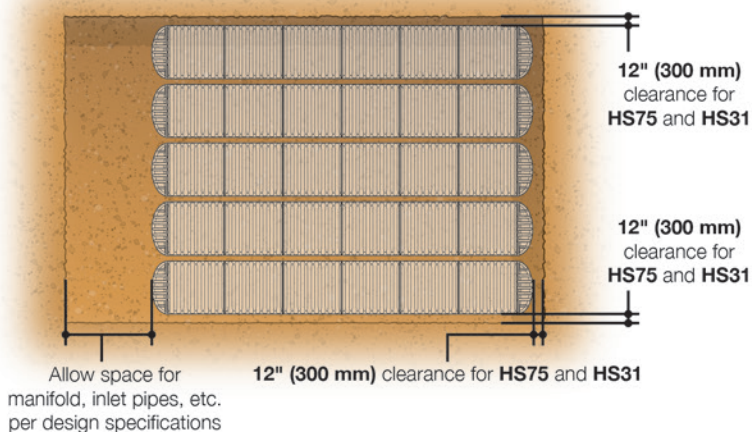


Placing Geotextile

- Place an AASHTO M288 Class 2 non-woven 4 oz. or 6 oz. (136 or 203 g/m²) geotextile on foundation bottom and sidewalls; overlap all seams 24 in. (600 mm).

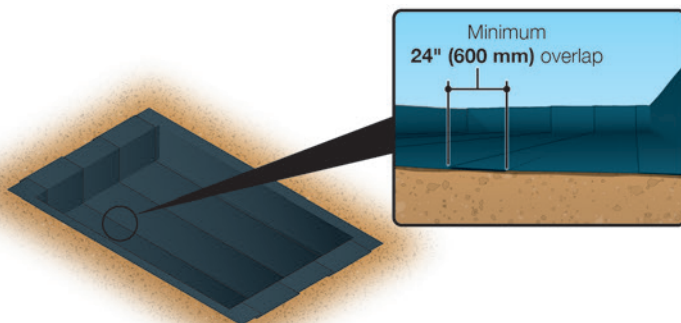

Placing Foundation

- Place base of $\frac{3}{4}$ in. - 2 in. (19-50 mm) clean, crushed, angular stone over geotextile.
- Maintain depth as indicated on project plans (see chart below).

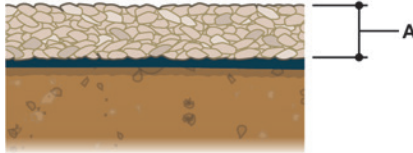

Chamber	Foundation Stone Depth (A)
HS75	6 in. (150 mm) minimum
HS31	6 in. (150 mm) minimum


- Compact stone with a vibratory compactor.




- Install perimeter underdrain if specified on project plans.

Manifold Assembly

- Assemble manifold system according to project plans.

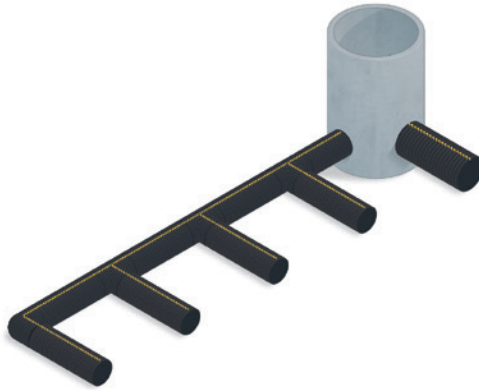

- To alleviate scour at inlets, place a 15 ft. (4.57 m) wide strip of woven geotextile under manifold and inlets.

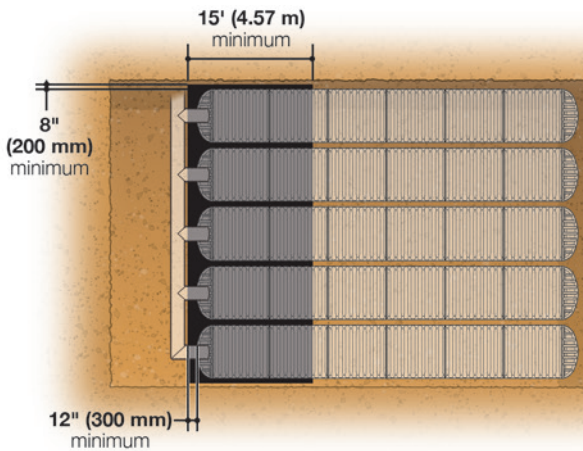

End Cap and Chamber Assembly



Connecting End Caps to Manifold

For prefabricated end cap/inlet:


- Connect to manifold using split coupler.

For on-site end cap/inlet fabrication:

- Core an opening in the end cap the same size as the inlet pipe, using the indicated scribe lines as a guide.
- Insert inlet pipe a minimum of 12 in. (300 mm) into end cap.
- Cover any voids greater than $\frac{3}{4}$ in. (19 mm) with non-woven geotextile.
- Connect to manifold using split coupler.

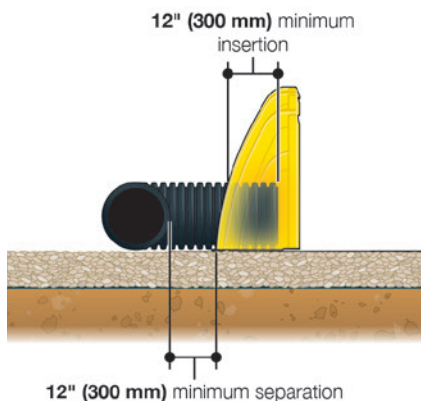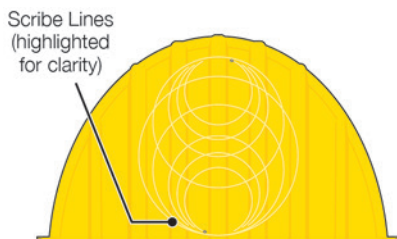


Adding Chambers

-  Note overlap and orientation instructions labeled on chamber ends (see illustration on next page).


- Place first corrugation of chamber under end cap, following direction arrow on chamber end.
- Fasten end caps with three screws at indicated locations to ensure they do not shift during backfill.



- Assemble each row by placing following chamber on top of previous chamber.

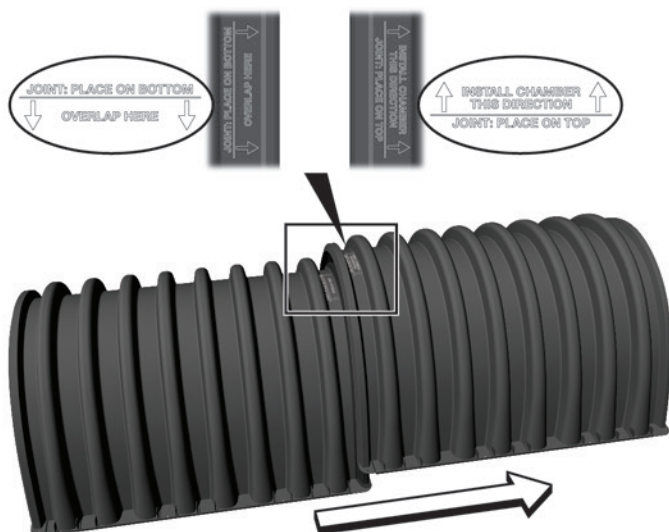

- Maintain required minimum row spacing (see chart below).

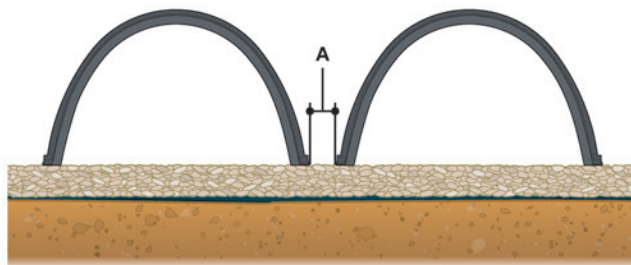

Chamber	Distance Between Chambers (A)
HS75	6 in. (150 mm) minimum
HS31	6 in. (150 mm) minimum

- Row assembly should not exceed reach of backfill placement equipment.
- Terminate each row with end cap.




Pre-treatment/Sediment Row

Prinsco recommends pretreatment of stormwater runoff using a Prinsco Stormwater Quality Unit and/or a sediment row. Review design plan for installation.

Inspection Port Placement

- Identify chamber(s) to be fitted with inspection port(s).
- Cut a 4 in. (100 mm) diameter opening at appropriate location(s).
- Build inspection port(s) using a tap tee connection to join Sch 40 or SDR 35 PVC pipe and fittings.

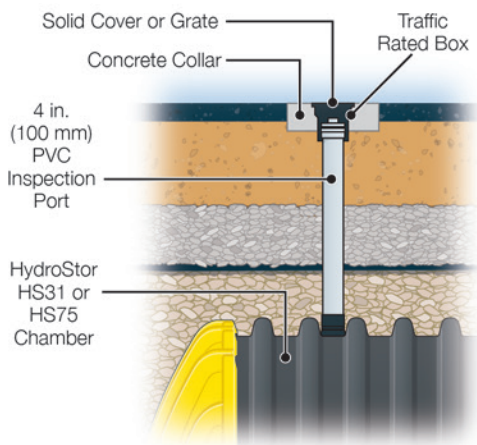

Chamber Backfill Process

Embedment Stone




No construction equipment shall be situated atop of the chamber system.


- Use ¾ in.-2 in. (19-50 mm) particle size, washed, crushed, angular stone.
- Carefully deposit embedment stone along chamber centerline using excavator or stone shooter.



- Stone height between rows and sidewalls should not differ by more than 12 in. (300 mm).

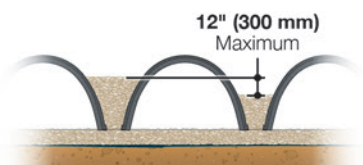


- Embedment stone minimum cover height: 6 in. (150 mm) for both HS75 and HS31.

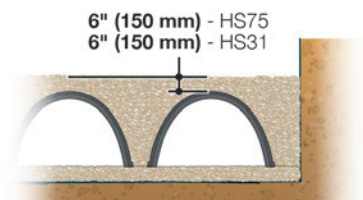




Wheel and Roller Loads Not Allowed. Minimum of 6" (150 mm) of cover for HS31 and HS75 chambers before a skid loader or small dozer is allowed over chambers.

- Finalize grading with tracked dozer with ground pressure less than 4.5 psi. (31 kPa), running dozer parallel to rows at all times.

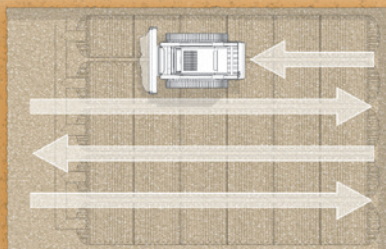

- Cover with AASHTO M288 Class 2 non-woven 4 or 6 oz. (136 or 203 g/m²) geotextile; overlap all seams 24 in. (600 mm).

Initial Backfill

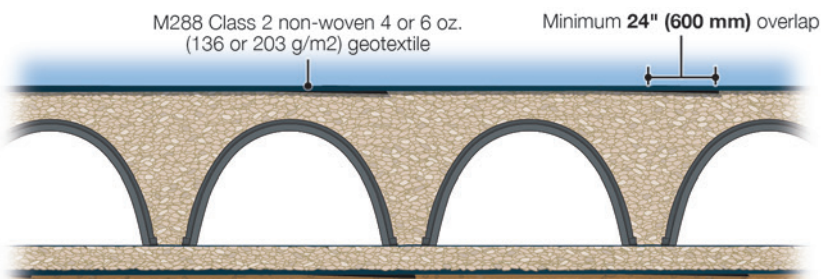

- Begin compaction to cover height of 18 in. (450 mm) for HS31 and HS75.
- Compaction equipment to travel parallel with chamber rows (refer to Table 3 on page 14 for loads).

Final Backfill

- Refer to design plans for final backfill specifications.

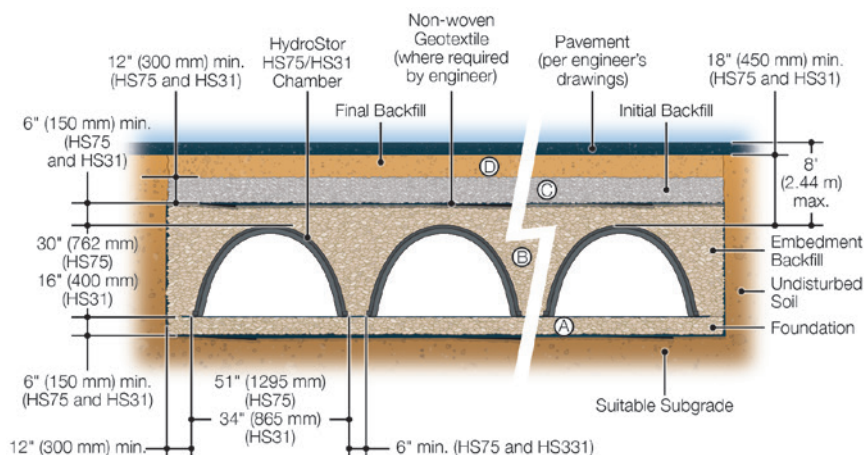


Table 1 - Backfill Materials

Fill Material Location	Material Description	AASHTO M43 Designation
[D] Final Backfill - Fill material for Layer D starts at the top of the C layer to the bottom of the pavement or to the finished grade of an unpaved surface. The pavement sub-base may be part of the final backfill.	Any backfill which provides adequate subgrade for the project per the engineer's plans. Plans shall indicate subgrade requirements.	N/A
[C] Initial Backfill - Material for layer C starts at the top of the embedment zone (layer B) and continues to 18" (450 mm) above the top of the chamber for the HS31 and HS75. The pavement sub-base may be part of the initial backfill layer.	Well graded granular material, <35% fines.	AASHTO M45 A-1, A-2, A-3 or AASHTO M43 3, 357, 4, 467, 5, 56, 57, 6, 67, 68, 7, 78, 8, 89, 9, 10
[B] Embedment Stone - Embedment stone will surround the chambers and extends from the top of the foundation stone (layer A) to the bottom of the fabric layer.	3/4" to 2" (19 to 51 mm) washed, crushed, angular stone.	AASHTO M43 3, 357, 4, 467, 5, 56, 57
[A] Foundation Stone - Foundation Stone extends from the subgrade to the foot of the chambers.	3/4" to 2" (19 to 51 mm) washed, crushed, angular stone.	AASHTO M43 3, 357, 4, 467, 5, 56, 57

Table 2 - Placement Methods

Fill Material Location	Placement Methods / Restrictions	HS31-HS75 Compaction Requirements
[D] Final Backfill	A variety of placement methods may be used. All construction loads must not exceed the limits in Table 3, page 14.	Subgrade will be placed and compacted to the requirements as shown on the site plans.
[C] Initial Backfill	Use of an excavator positioned off bed is recommended. Small excavators and small dozers may be allowed based on the information in Table 3, page 14.	Compaction will not begin until a minimum of 12" (300 mm) of material is placed over the chambers. Additional layers shall be compacted in 6" (150 mm) lifts to a minimum of 95% standard proctor density for well graded material. Roller gross vehicles are not to exceed 12,000 lbs. (53.38 kN) and dynamic force not to exceed 20,000 lbs.(88.96 kN).
[B] Embedment Stone	No equipment is allowed on bare chambers. Use excavator or stone conveyor positioned off bed to evenly place the backfill around and on top of all of the chambers.	No compaction required
[A] Foundation Stone	Placement with a variety of equipment is acceptable to provide a stable, level base.	Placed in 6" (150 mm) lifts and compacted with a vibratory roller.

Table 3 - Construction Loading

Material Location	Fill Depth Above Chambers in. (mm)	Max Allowable Wheels Loads		Max Allowable Track Loads		Max Allowable Roller Loads
		Max Axle Load For Trucks lbs. (kN)	Max Wheel Load For Trucks lbs. (kN)	Track Width in. (mm)	Max Ground Pressure psf (kPa)	Max Drum Weight Dynamic Force lbs. (kN)
[D] Final Fill Material	36" (900) Compacted	32,000 (142)	16,000 (71)	12" (300)	3420 (163.75)	38,000 (169)
				18" (450)	2350 (112.52)	
				24" (600)	1850 (88.58)	
				30" (750)	1510 (72.30)	
[C] Initial Fill	24" (600) Compacted	32,000 (142)	16,000 (71)	12" (300)	2480 (118.74)	20,000 (89)
				18" (450)	1770 (84.75)	
				24" (600)	1430 (68.47)	
				30" (750)	1210 (57.94)	
				36" (900)	1070 (51.23)	
	24" (600) Dumped	24,000 (107)	12,000 (53)	12" (300)	2245 (107.49)	HS31/HS75: 20,000 (89) Gross weight of roller not to exceed 12,000lbs (5,443 kg)
				18" (450)	1625 (77.81)	
				24" (600)	1325 (63.44)	
				30" (750)	1135 (54.34)	
				36" (900)	1010 (48.36)	
	18" (450)	24,000 (107)	12,000 (53)	12" (300)	2010 (96.24)	HS31/HS75: 20,000 (89) Gross weight of roller not to exceed 12,000lbs (5,443 kg)
				18" (450)	1480 (70.86)	
				24" (600)	1220 (58.41)	
				30" (750)	1060 (50.75)	
[B] Embedment Zone	12" (300)	N/A	N/A	12" (300)	HS31/HS75: 1540 (73.74)	N/A
				18" (450)	HS31/HS75: 1190 (56.98)	
				24" (600)	HS31/HS75: 1010 (48.36)	
				30" (750)	HS31/HS75: 910 (43.57)	
	6" (150)	N/A	N/A	12" (300)	HS31/HS75: 1070 (51.23)	N/A
				18" (450)	HS31/HS75: 900 (43.09)	
				24" (600)	HS31/HS75: 800 (38.30)	
				30" (750)	HS31/HS75: 760 (36.39)	

N/A = Not Allowed

Notes:

1. 36 in. (900 mm) of stabilized cover is required over chambers before full dump trucks may travel and dump on chamber system.
2. To calculate the ground pressures for small tracked dozers, determine the vehicle operating weight and divide by total ground contact area for both tracks. The ground pressures for tracked excavators will be greater due to the loaded bucket weight and boom extension.
3. Allowable track loads based on the vehicle travel only. Excavators shall not operate on chamber beds until a minimum of 3 feet (900 mm) of cover has been placed over the chambers.
4. Mini excavators (<8,000 lbs. [3,629 kg]) can be used with at least 12 in. (300 mm) of stone cover over the chambers and are limited based on the ground pressures shown in Table 3 on page 14.
5. During paving operations, loaded dump trucks at minimum cover heights may be necessary. Precautions must be taken to ensure that rutting of the sub base layer does not occur, that minimum cover heights are met and that adequate compaction of the sub base is maintained. Refer to Table 3 on page 14 or contact your local Prinsco Representative for more information about allowable axle loads.
6. Construction materials, excess equipment or spoil piles should not be positioned over a HydroStor chamber system. For equipment not listed in Table 3 on page 14, contact your Local Prinsco Representative for more information.
7. Compaction of the initial backfill layer should not begin until the minimum cover over the chambers has been reached (minimum 18 in. [450 mm] for HS31 and HS75).

Notes:

[illegible]

Notes:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



HS31

HS75

31ft ³ (.88m ³)/chamber	Installed Storage Capacity*	75 ft ³ (2.12m ³)/chamber
16" (406mm)	Height	29.7" (754mm)
34" (864mm)	Width	51" (1295mm)
87.8" (2253mm)	Unit Length	87.1" (2212mm)
85.4" (2166mm)	Installed Length	84.9" (2156mm)
32 lbs (14.5kg)	Weight	70 lbs (31.75kg)
45	Chambers/Pallet	33
Polypropylene	Material	Polypropylene
Injection Molding	Mfg. Process	Injection Molding
Lightweight Option	Special Features	Integrated Handles
Meets or Exceeds	ASTM Standards	Meets or Exceeds
6" (150mm) minimum	Backfill Above Chamber	6" (150mm) minimum
6" (150mm) minimum	Bedding	6" (150mm) minimum
6" (150mm)	Chamber Spacing	6" (150mm)
34" (864mm)	Chamber Width	51" (1295mm)
12" (300mm)	Backfill At Edge Of System	12" (300mm)
16" (406mm)	Chamber Height	29.7" (754mm)
18" (450mm)	Minimum Cover	18" (450mm)
8' (2.44m)	Maximum Burial Depth	8' (2.44m)

* Assuming 40% void volume of backfill with 6" (150mm) bedding and 6" (150mm) cover for HS75 and HS31.



For more **HydroStor™** resources, visit

Prinsco.com/HydroStor-Resources